





INTRODUCING 'EPIPHANY' MULTI FUNCTION SPACE

- HDMI Input, Wireless Presenting, Hand Held & Lapel wireless microphones, Ceiling Pendant Speakers and cameras.
- 1 x 4ch Vision Mixer for external streaming (requires support of an external streaming partner).
- 10" Wall Mount Touch Panel for control.
- 110" Motorised screen with Epson EB-L1075UNL projector with 1x Sony 65" Flat Panel Display for Overflow.
- 2 x 12x Zoom PTZ Cameras (Presenter & Audience)
- Infrared Hearing Assistance
- At Entrance: 10" Room Scheduling Panel

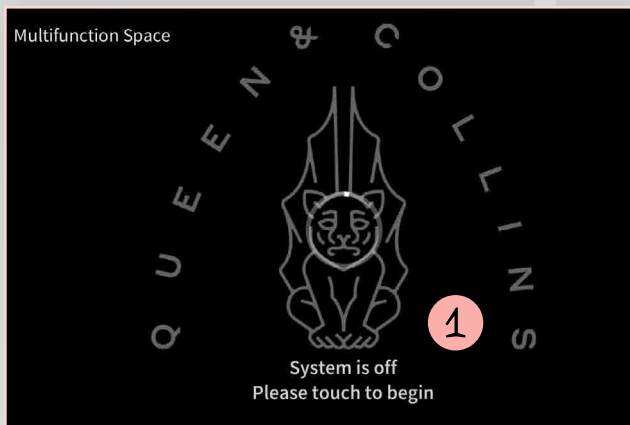

TO TURN ON SYSTEM

- 1 Touch screen to begin.

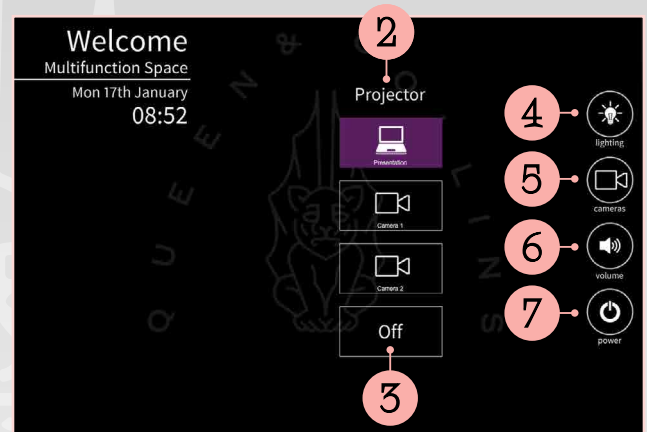


WELCOME SCREEN

- 2 Select source for Projector – Presentation, Camera 1 or Camera 2. For **wireless presentation** select Presentation and refer to screen for instructions.
- 3 Select to turn off image.
- 4 Select for lighting controls.
- 5 Select for camera controls. Camera must be chosen before VC call. Camera can not be changed during call.
- 6 Select for audio controls.
- 7 Select to turn off system.


Audio Visual Quick Reference Guide

Multi Function Space

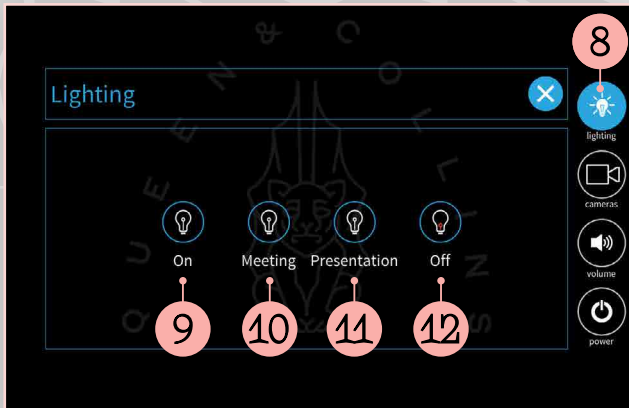


LIGHTING

- 8 Select for lighting controls.
- 9 Select to turn on all the lights.
- 10 Select for preset lighting state for meetings.
- 11 Select for preset lighting state for presentations.
- 12 Select to turn off all lights.

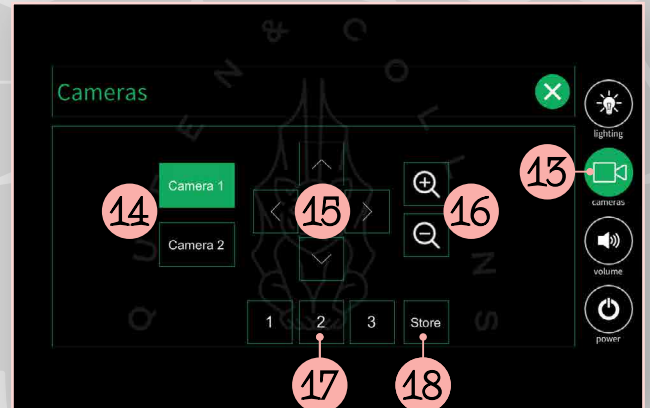


CAMERAS

- 13 Select for camera controls.
- 14 To select camera. Camera must be chosen before VC call. Camera can not be changed during call.
- 15 Camera pan and tilt controls.
- 16 Camera zoom in and out.
- 17 Select to recall preset.
- 18 Select to store preset on selected preset.

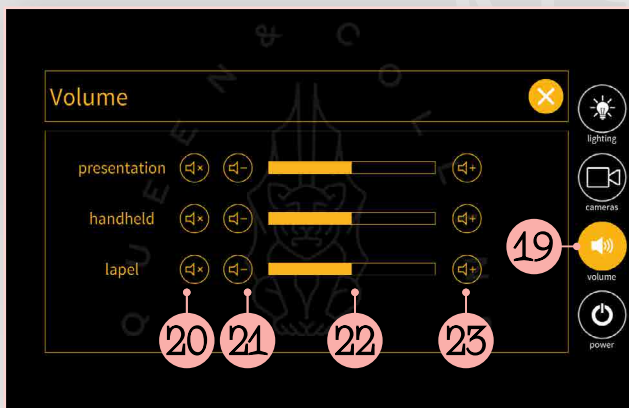

AUDIO VOLUME

- 19 Select for Audio volume controls.
- 20 Select to turn off audio volume of audio sources.
- 21 Select to lower the audio volume.
- 22 Bar graph to show audio volume.
- 23 Select to raise the audio volume.

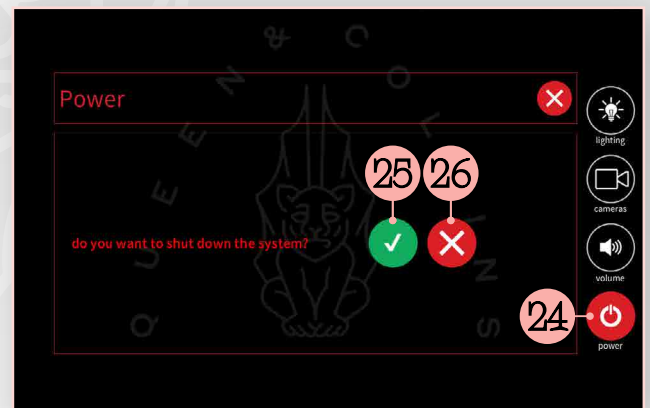

SHUT DOWN POWER

- 24 Select to power down system.
- 25 Select to confirm power down.
- 26 Select to cancel power down.



PORTABLE VISION MIXER

- Locate wall outlets. Connect the 3x CAT6A cables and the 2x audio cables to portable AV mixer. This will supply video and audio to the mixer.
- If required connect the preview monitor to HDMI output of mixer.
- Connect power and switch on.
- The mixer has a USB3 out to connect to laptop so that you can create a recording.



QR CODE FOR
DETAILED MANUAL OF
ROLAND VR-4HD AV MIXER

MORE TEAMS HELP

Visit the Microsoft website or Google
'Microsoft Teams Rooms Help'
The site is very helpful.

WIFI ACCESS

Mezzanine Meeting Room WiFi
Password: **LPnN22D6**

Guest AV WiFi
Password: **TTwz9XWT**